


# Aervoe® #800/801 Vers-A-Striper


## ASSEMBLY

1. Remove unit from carton.
2. Loosen the wing nut that secures the upper handle to the lower handle assembly and the two wing nuts that to secure the lower handle assembly to the body of the unit.
3. Raise upper handle in line with the lower section and tighten the wing nut.
4. Position the lower section connection arms on the body and fasten with the wing nuts at the bottom edge of the unit and tighten the wing nuts.
5. To use the striping alignment guide, reach under the front end of the unit and rotate the arrow 90° until it points straight out in front of the unit.
6. To use the radius wheel, loosen the wing nut and slide wheel bracket down to one of the two positions while lifting up slightly on the back of the unit. Tighten the wing nut. The radius wheel allows you to easily make curved stripes such as circles and half circles on pavement or turf.

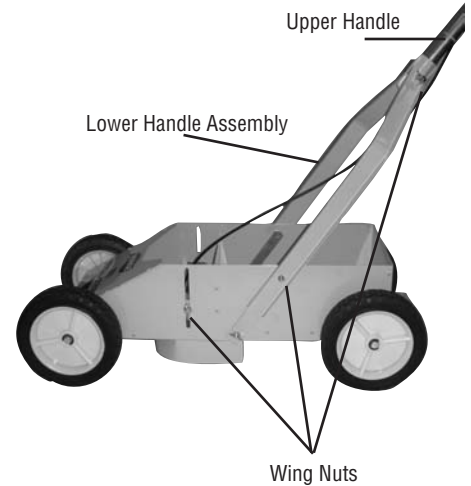

## OPERATION

1. When viewing from the front of the unit, insert a can of Aervoe Striping Paint in the inverted position on the left side of the carrier assembly.
2. Slide the can into position under the two locking spring arms.
3. Evacuate contents of the can by squeezing the trigger.
4. To vary the width of the sprayed line, loosen the two carrier assembly wing nuts and raise the assembly for a wider line or lower it for a narrower line. Tighten the wing nuts when the desired line width is achieved. It is best to test the unit for line width compliance on a piece of cardboard prior to actual operation.
5. A full case of Striping Paint may be carried on the unit in the space available.
6. When spraying is complete, remove the can by sliding to the left in the carrier assembly and lift out.

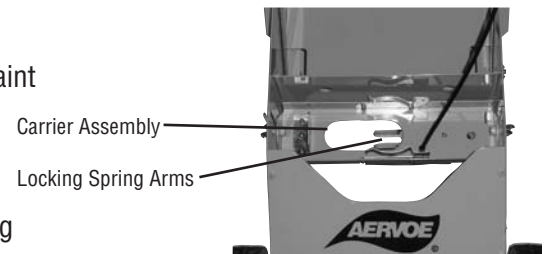

**Aervoe Industries Incorporated**

Gardnerville, NV 89410

800-227-0196

[www.aervoe.com](http://www.aervoe.com)